
Room editing

- 1.Short press setting button (P14)
- 2. Short press Edit room information button Edit room information there will be room editing page as(P16)

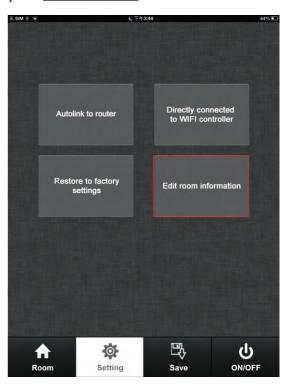








P15

P16

a. Edit room/zone name

- 1)Press Edit button Edit (P20)
- 2)Click the words("bedroom" for example)
- 3)Clean the old name and enter a new name (zone 1 for example)
- 4)Press save button Save (P21)

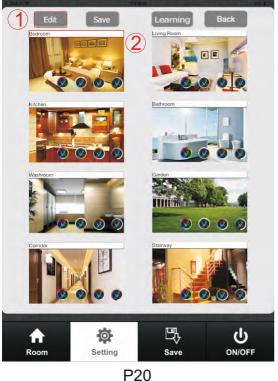




P21

b. Change picture for the room

- 1)Press Edit button Edit (P20)
- 2)Short press the middle of the room picture(P22)
- 3)Camera will be opened automatically
- 4)Take a picture
- 5)Click use photo Use Photo (P23)
- 5)Press save button Save (P22)



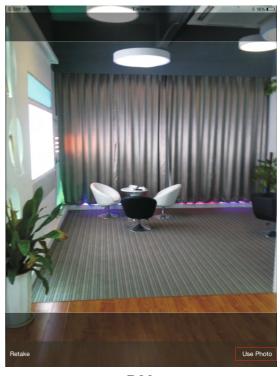

P22 P23

c. Edit color wheel for corresponding LED lighting

1)Press Edit button there will be four different color wheel in lower right



- For RGBW LED lighting
- For CDW LED lighting
- For CCT led lighting
- For single color LED lighting

P24

- 2)Cancel the mark for other three color wheels and keep one (take single color as example) (P25)
- 3)Press save Save
- 4)Choose this zone there will be one directly enter corresponding color wheel





P25 P26

Attention


Different zones which were edited to different color wheel cannot be chose at same time.

Different Zones which were edited to same color wheel or did not be edited any color wheel can be selected at same time.

Manual

a. Room button(P27,P28)

- 1 Choose Room button
- 2 Short press middle of zone picture
- 3 Mark on the upper right side of room picture to indicate choose successfully, multiple rooms can be choose at same time
- 4 Press room button again be confirm the rooms' selection
- 5 Upper area will indicate room's name we selected.

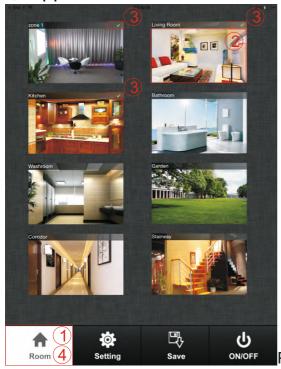



(P29)Long press middle of the room picture to on/off corresponding rooms/zones. There will be a red off mark 0 on the right upper side of the room picture when the room is switched off.



P29

b. color wheel

There will be four different color wheels we can select if we did not edit the room: RGB, CDW, CCT, Single color.

1)Slide the upper areas from top to down to choose color wheel

from one to one. (P29,P30)








Or fast press twice to enter the color wheel selection interface to choose color wheel (P31)

P31

c. pause&run button(P32)

Running button exist in RGB, CDW color wheel interface, they are similar so here will take RGB as an example to explain.

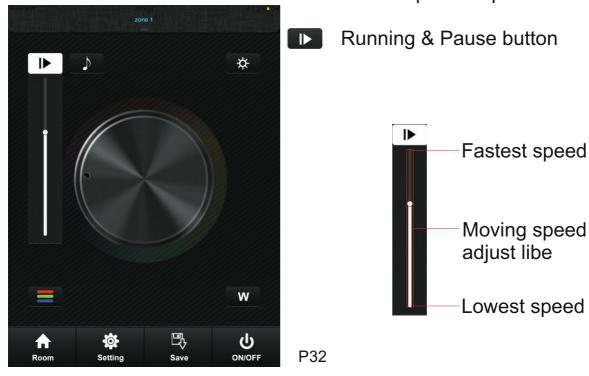


Attention

Press pause&run button , mode will run. Press it once, it runs one mode. Press button again, it stops, then press one more time, it will enter next mode. There are total 10 build-in modes. If we pressed color after we pause the running, the running mode will back form first one.

Long press the pause&run button , LED lighting will flash twice, the color running in different zones will be switched from Synchronize moving to color chasing & color chasing to Synchronize running.

d. music

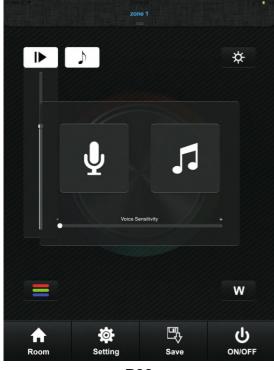





LED lighting will move according the voice decibel nearby. Bigger decibel, faster speed. LED lighting will back to adjusted speed when no voice effect.



LED lighting will move according the level of music voice. Bigger decibel, faster speed. LED lighting will back to adjusted speed when no voice effect.

The highest, a low voice will affect the moving speed lowest

The lowest, need a high voice affect moving speed.



When choose

it will open your local music palyer(P34,P35)

e. RGB/CDW brightness level line

This button exist in RGB/CDW interface, they are similar, so here will take RGB as an example to explain.



1)Short press the button



2)Brightness level can be adjusted from 0-255 to an accurate color.


Attention

Before adjust the color by color line, LED might in already in an existing color, so we need zero clearing each channel first: moving each channel in any level between 1-225, then move it back to zero, then RGB lighting will off which means zero clearing successfully.

f. W button

This button only exists in RGB channels color wheel interface to adjust W channel brightness independently.



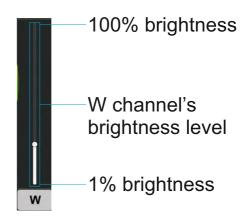

P37

Long press W button


w to ON/OFF W channel independently.

g. Brightness button

Brightness button exist in RGB, CDW and CCT color wheel interface.



In RGB color wheel interface, it only adjusts R, G and B three channels brightness, and cannot adjusts W channel. We need use W button w to adjust W channel brightness independently.

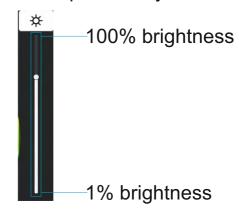

P38

In CDW and CCT color wheel interface, it adjusts all channels brightness.


Attention

Before adjust the color by color line, LED might in already in an existing color, so we need zero clearing each channel first: moving each channel in any level between 1-225, then move it back to zero, then RGB lighting will off which means zero clearing successfully.

f. W button

This button only exists in RGB channels color wheel interface to adjust W channel brightness independently.



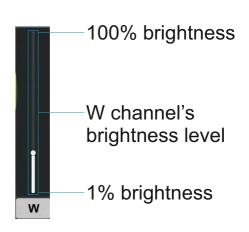

P37

Long press W button


w to ON/OFF W channel independently.

g. Brightness button

Brightness button exist in RGB, CDW and CCT color wheel interface.



In RGB color wheel interface, it only adjusts R, G and B three channels brightness, and cannot adjusts W channel. We need use W button w to adjust W channel brightness independently.

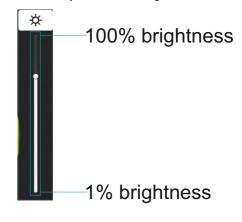

P38

In CDW and CCT color wheel interface, it adjusts all channels brightness.

h. Save button

1.Save

- 1)Select rooms/zones
- 2)Select color or moving modes
- 3)Short press save button
- 4)Long press any button of s1 s2 s3 s4 S2 for example)
- 5)LED lighting will flash indicate save successfully.

2.Recall

- 1)Select rooms/zones
- 2)Short press save button
- 3)short press saved button in s1 s2 s3 s4 s2 for example)
- 4)LED will indicate saved color or moving modes